 
 
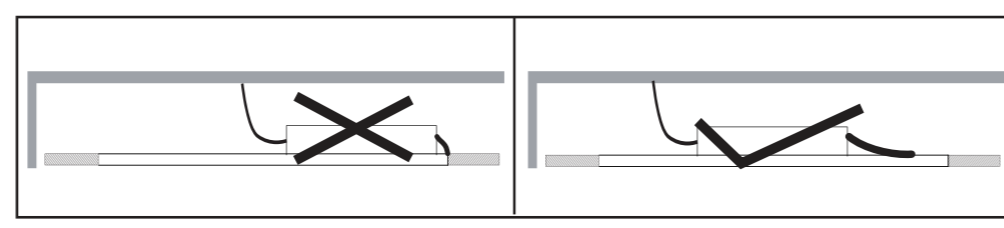 
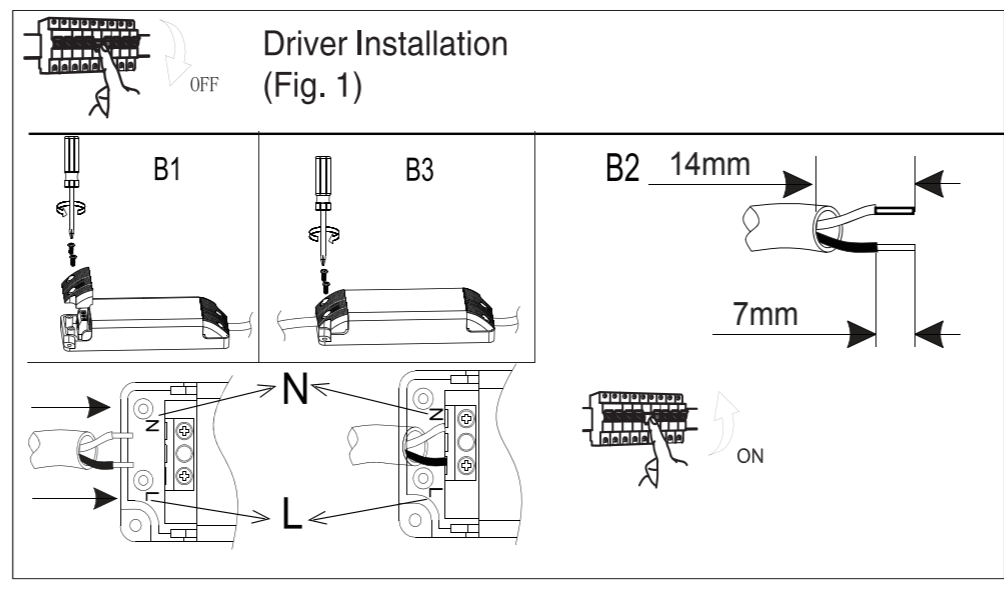 
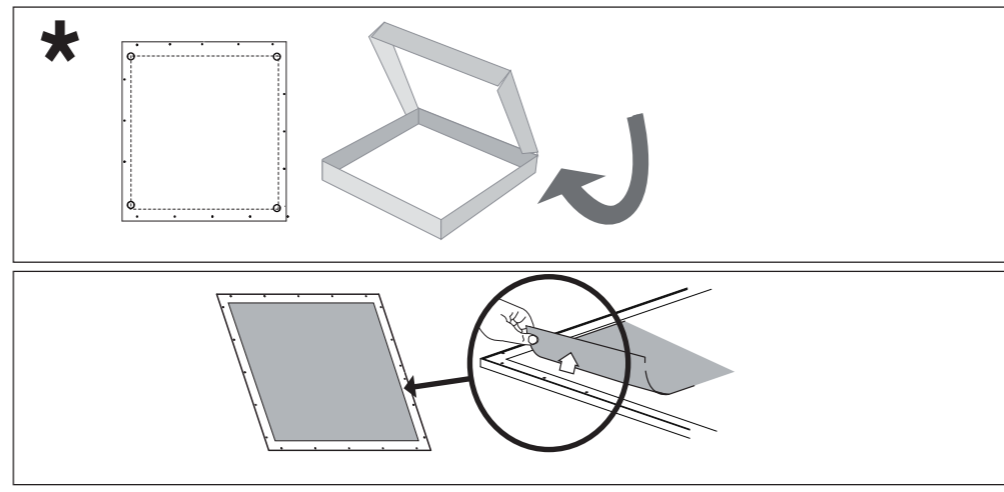 
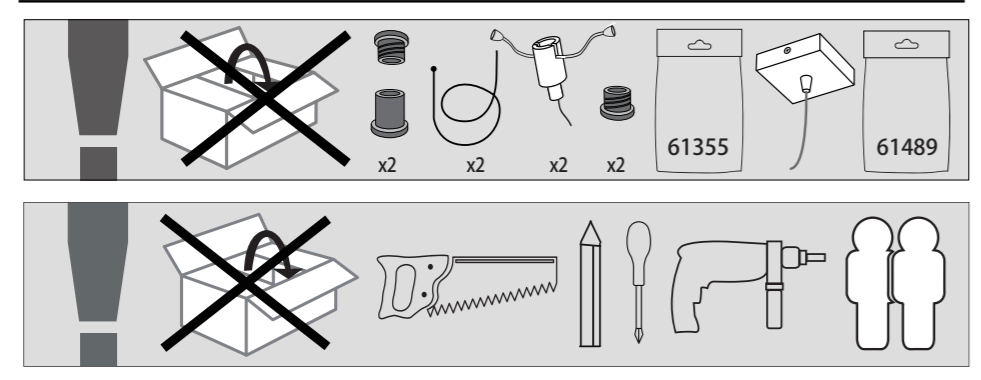 
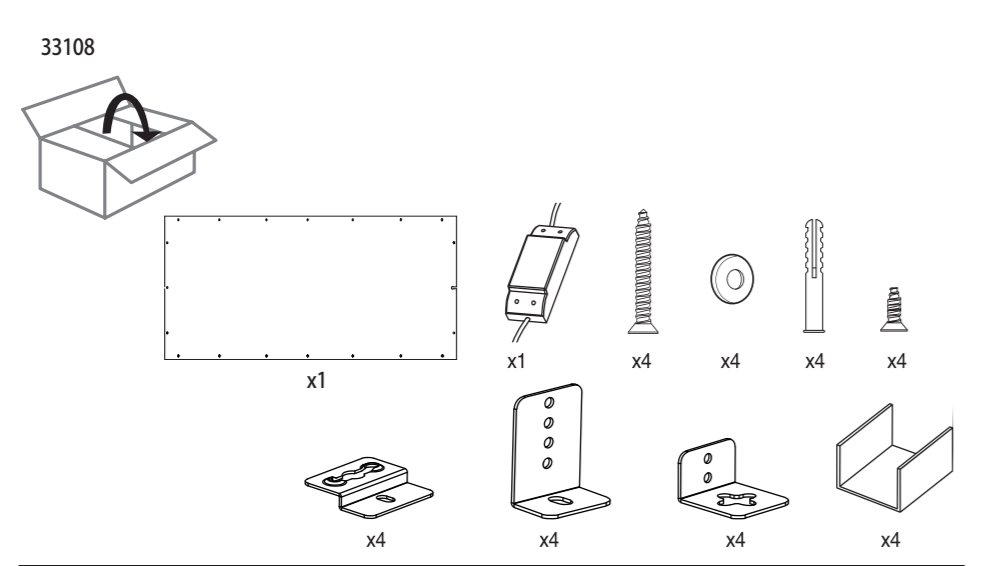 


555 mm

 
 
 
 
 
 
420 mm

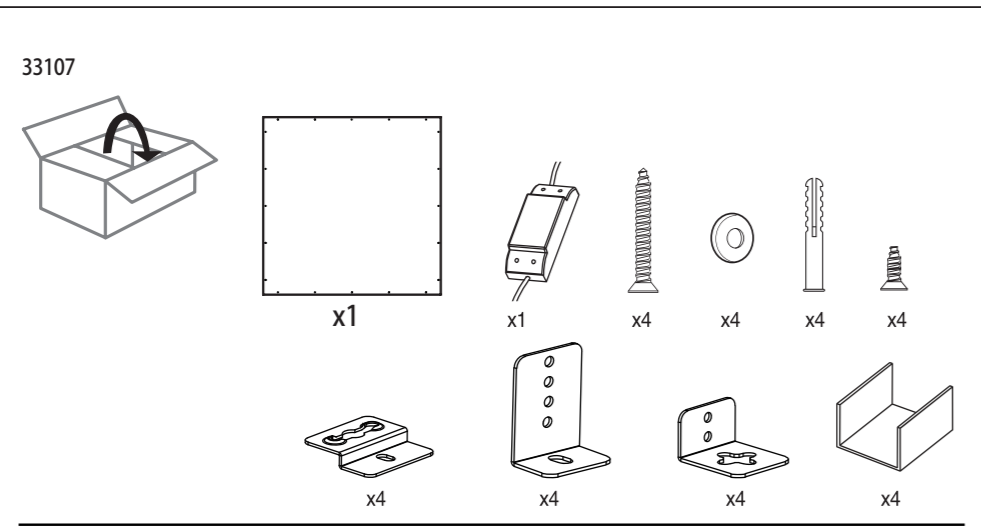







A Ceiling Panel Mount

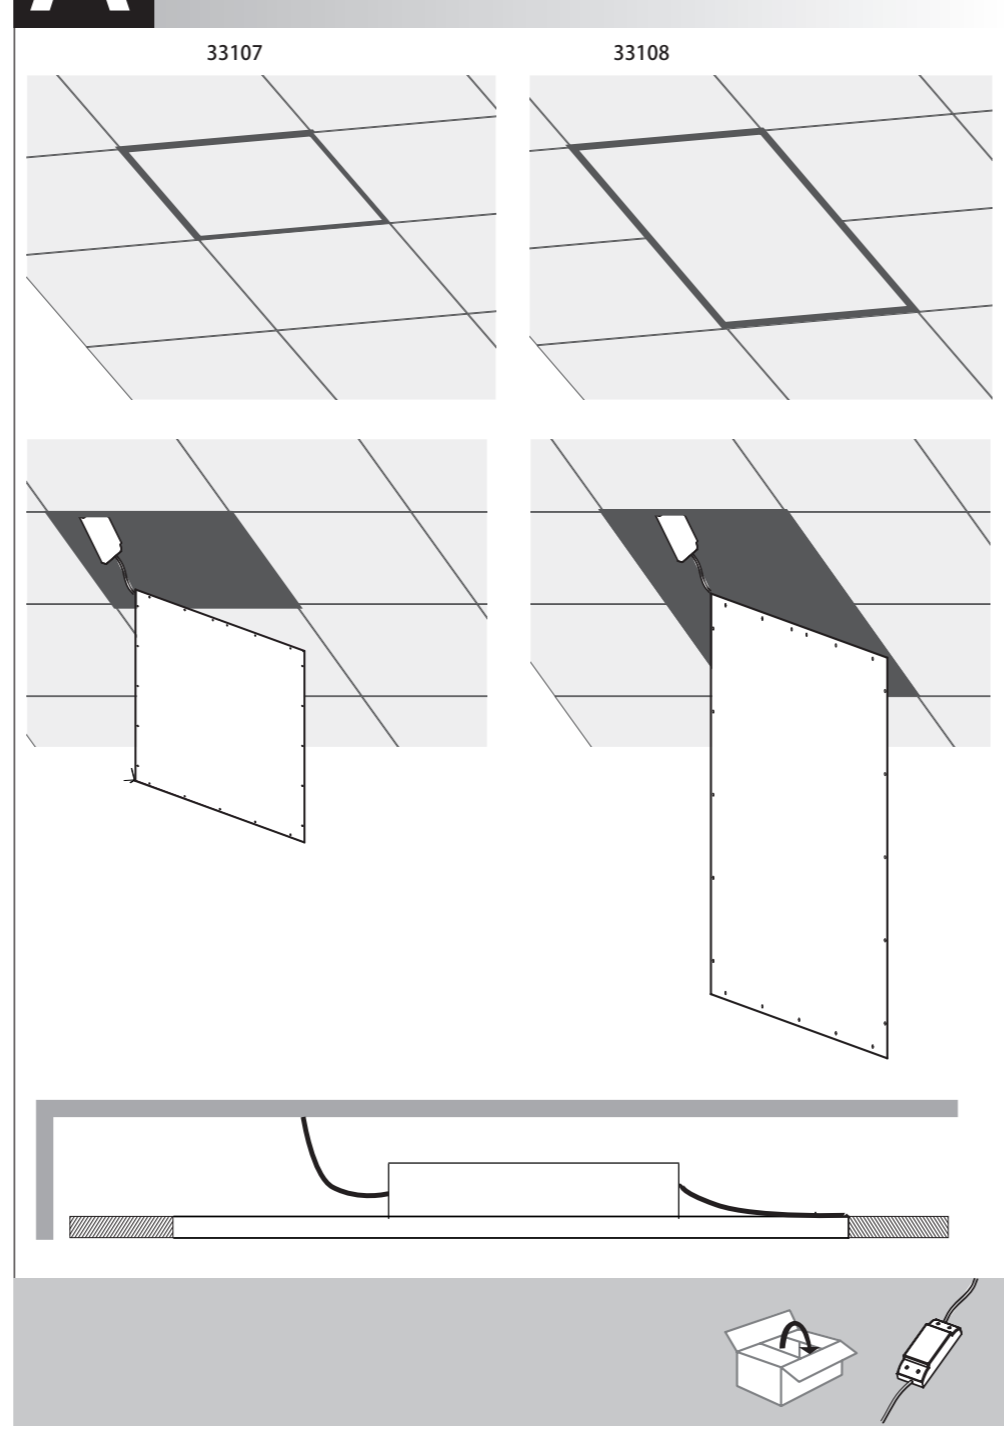

B Recessed Ceiling Mount

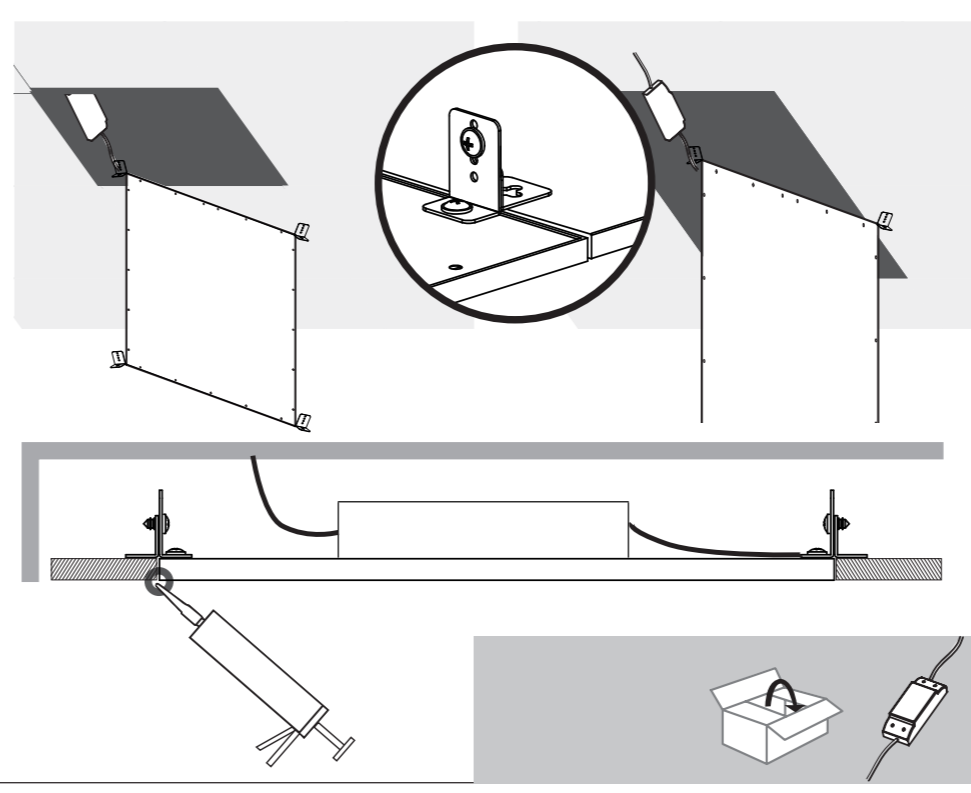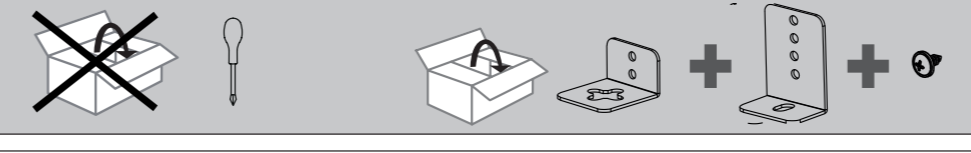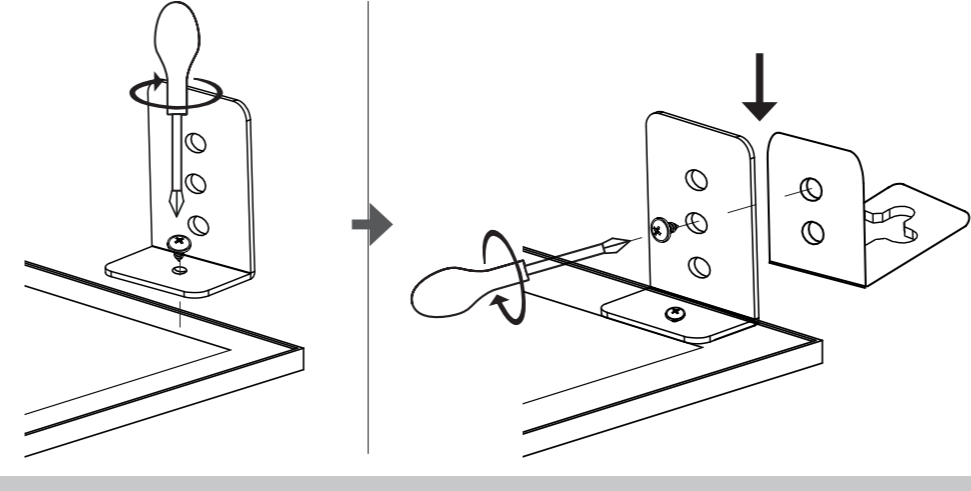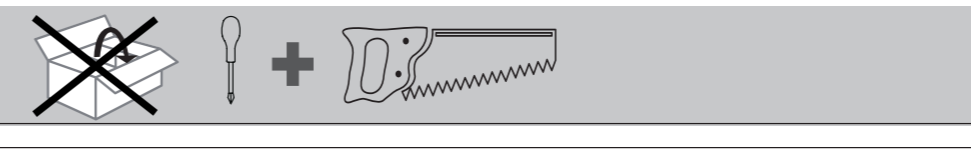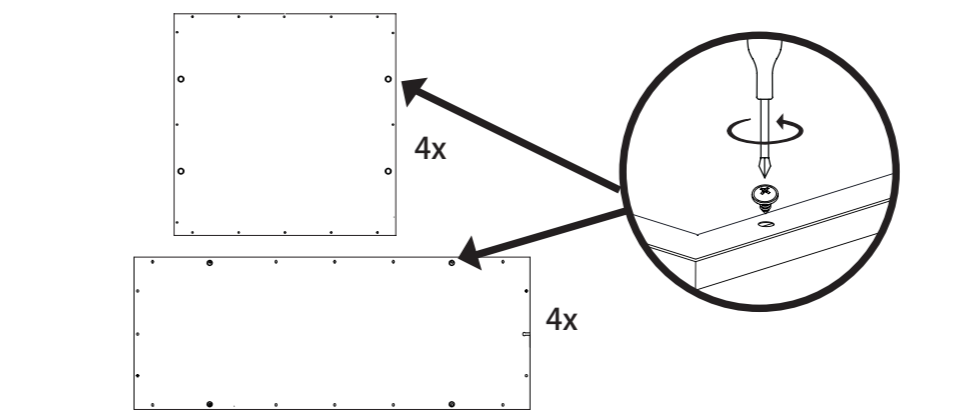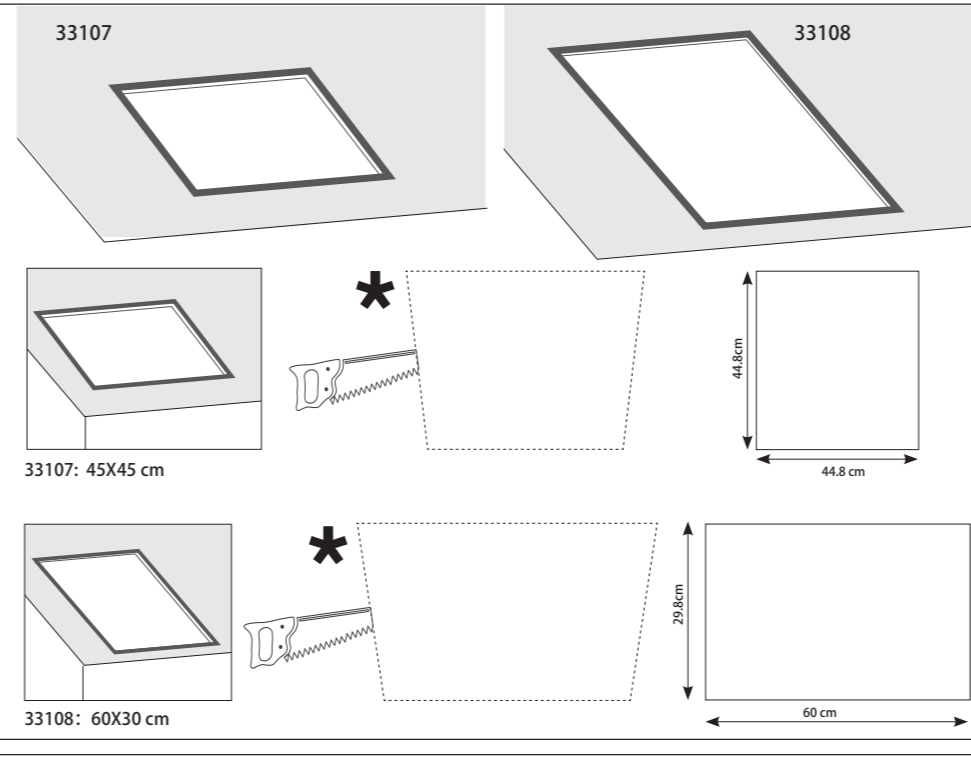

C Semi Recessed Mount

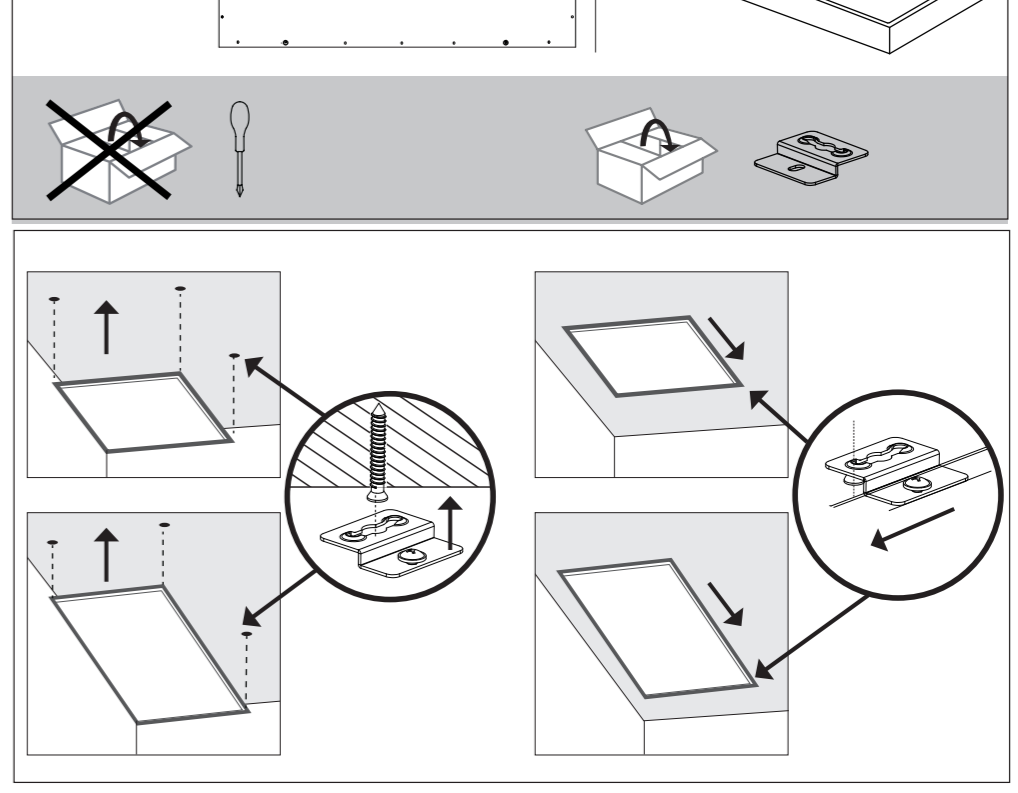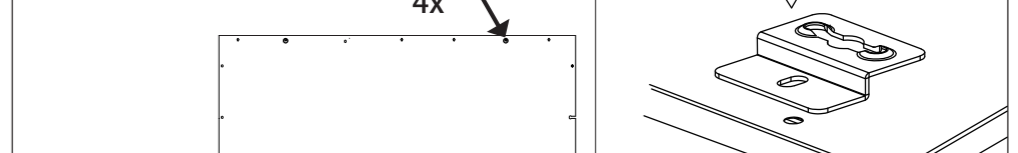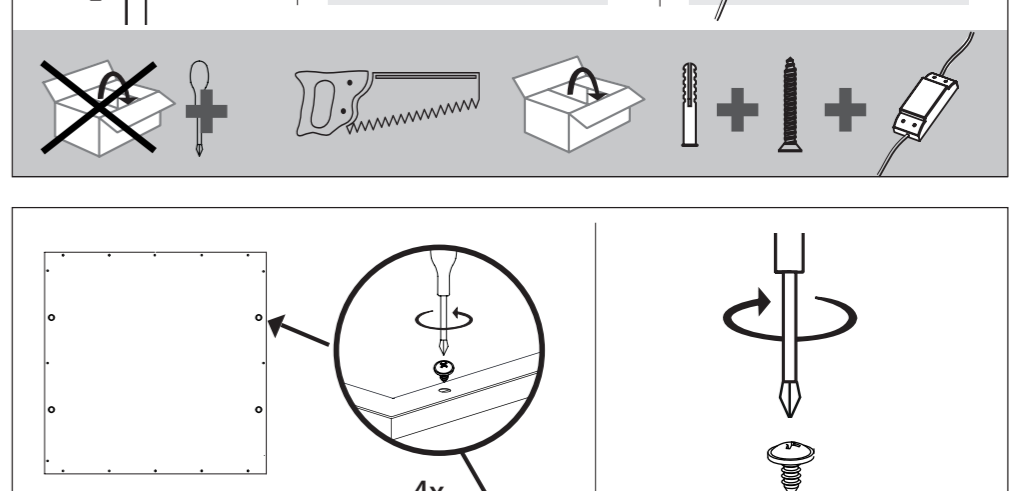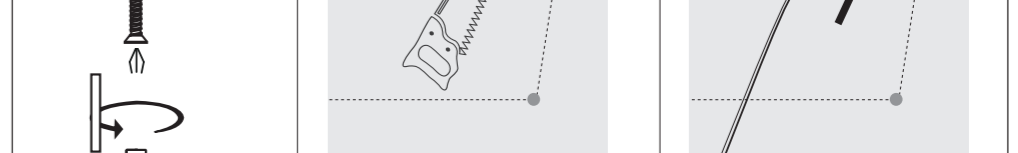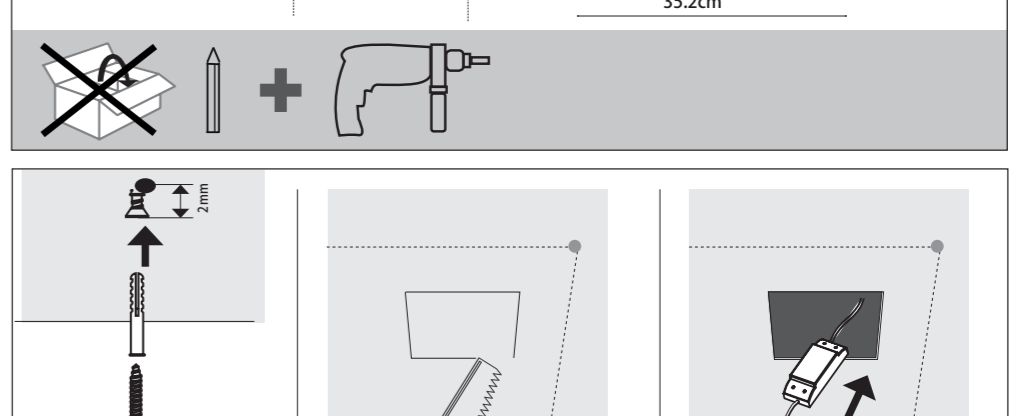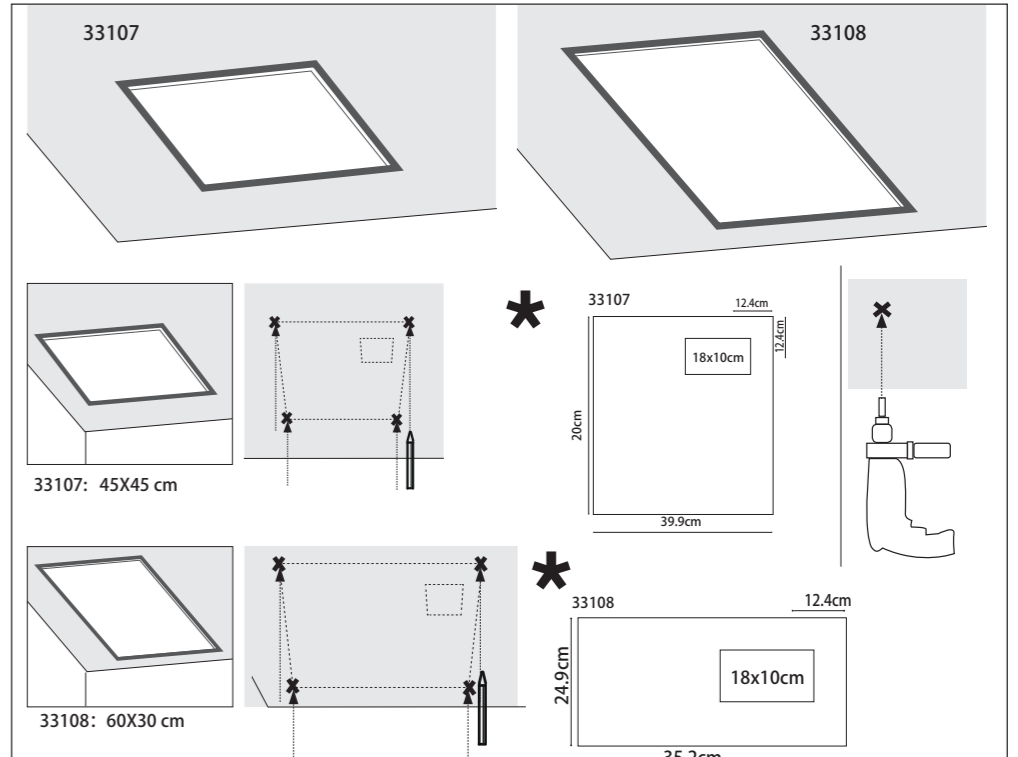      

EGLO

33107
33108

 
 
 
 


LED-PANEL





555 mm

420mm

D Surface Mount

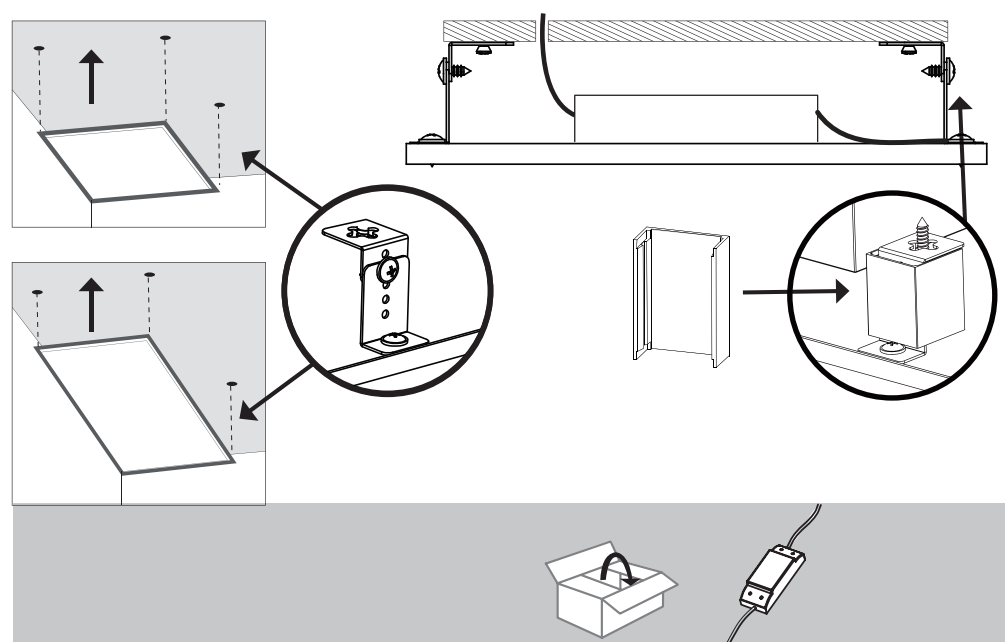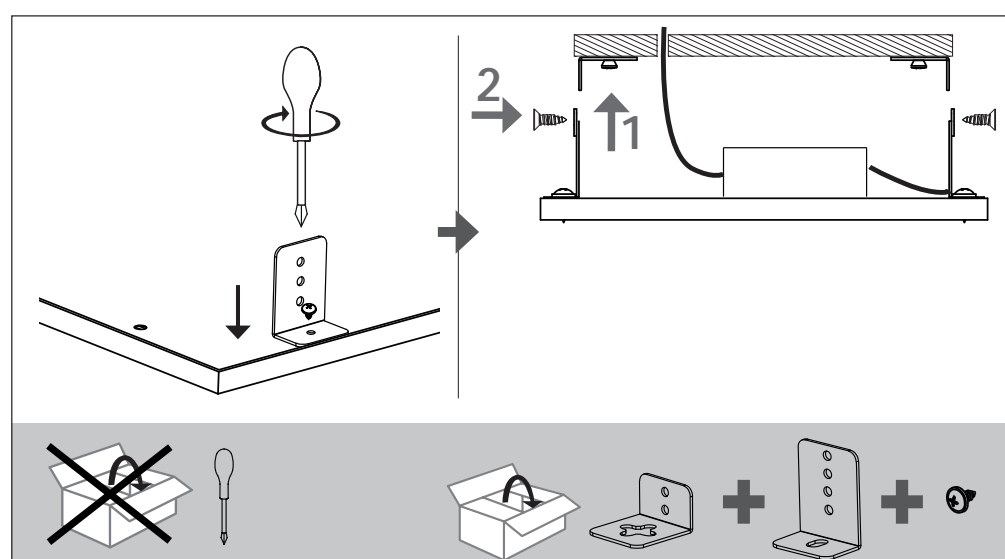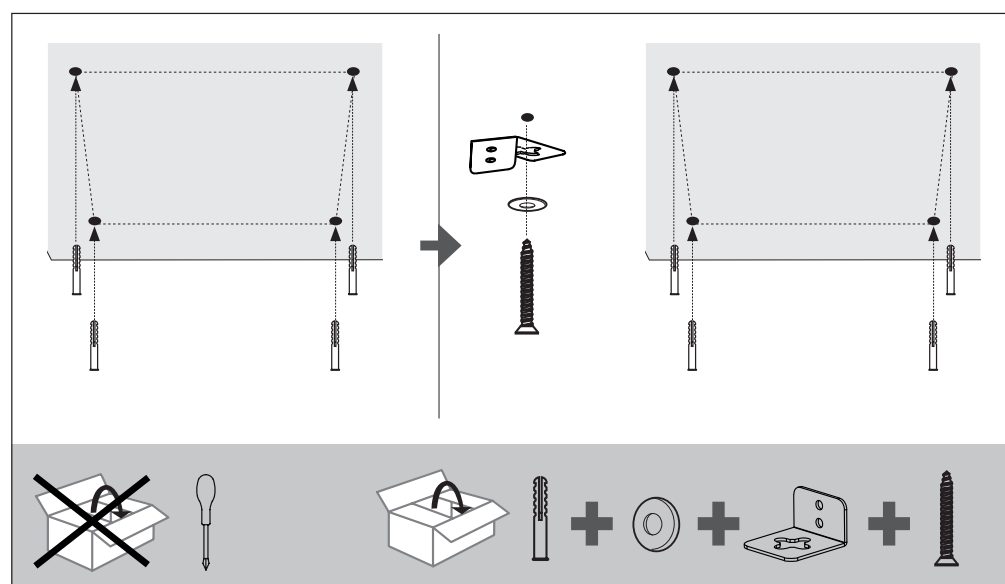
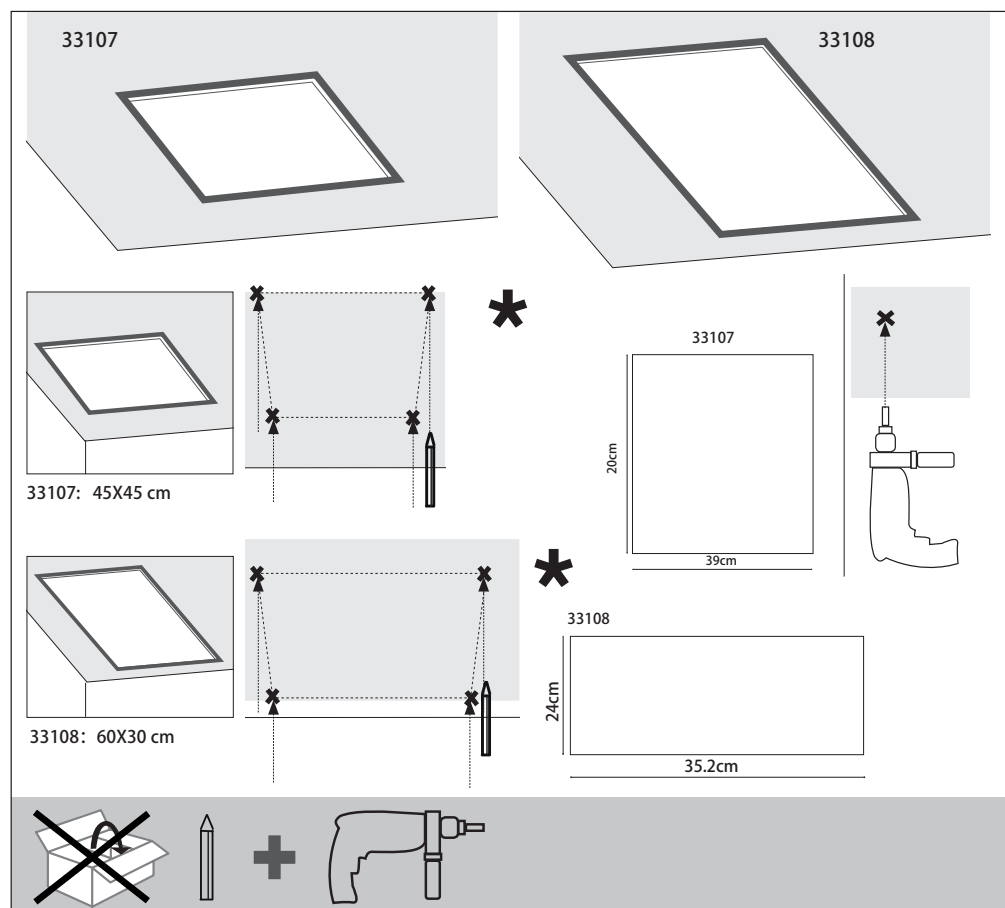


E Hanging Mount


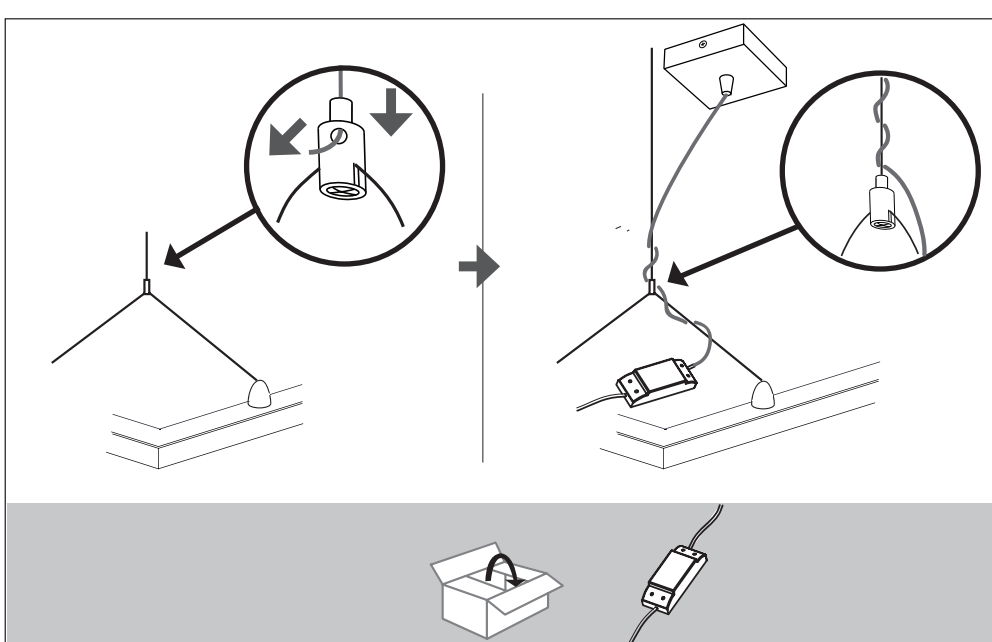 
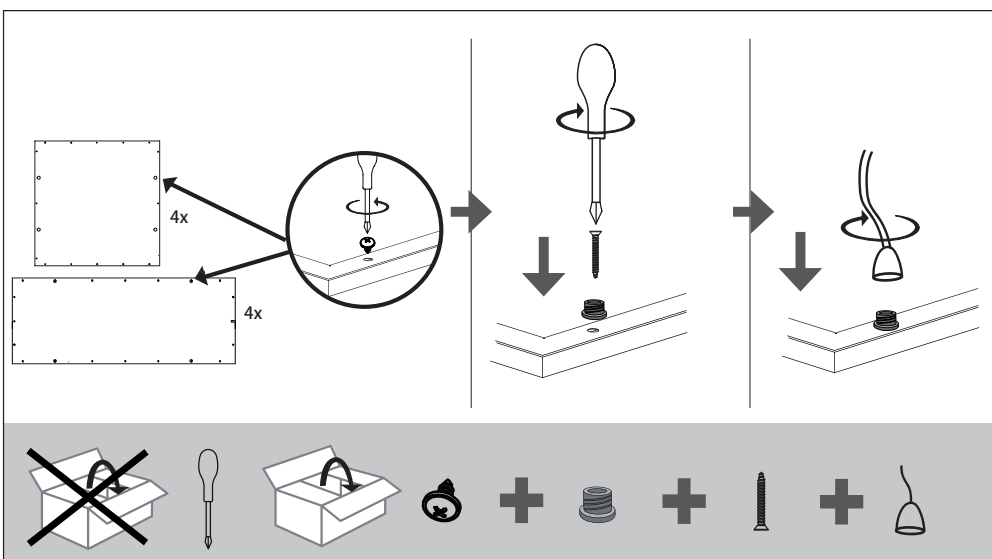 
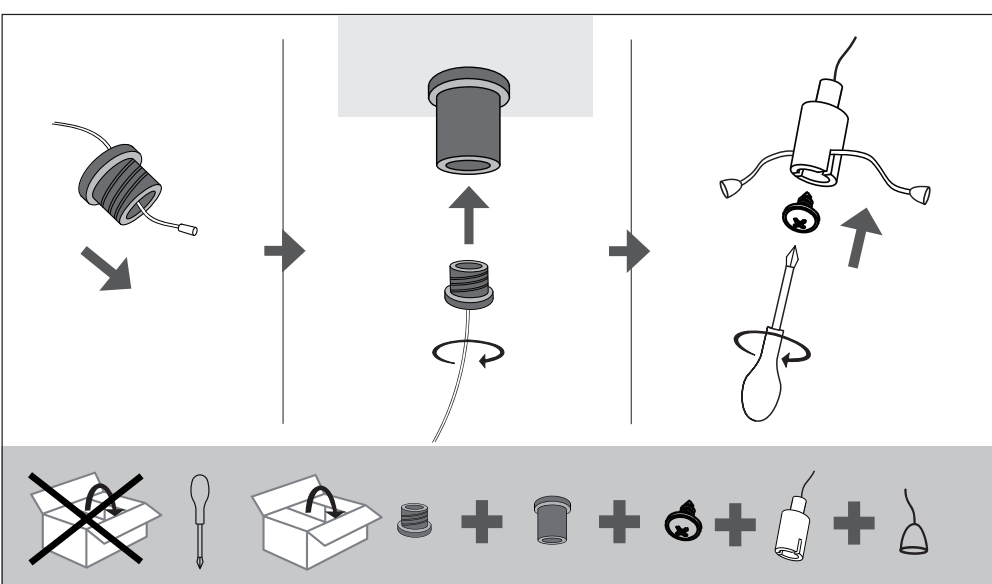 
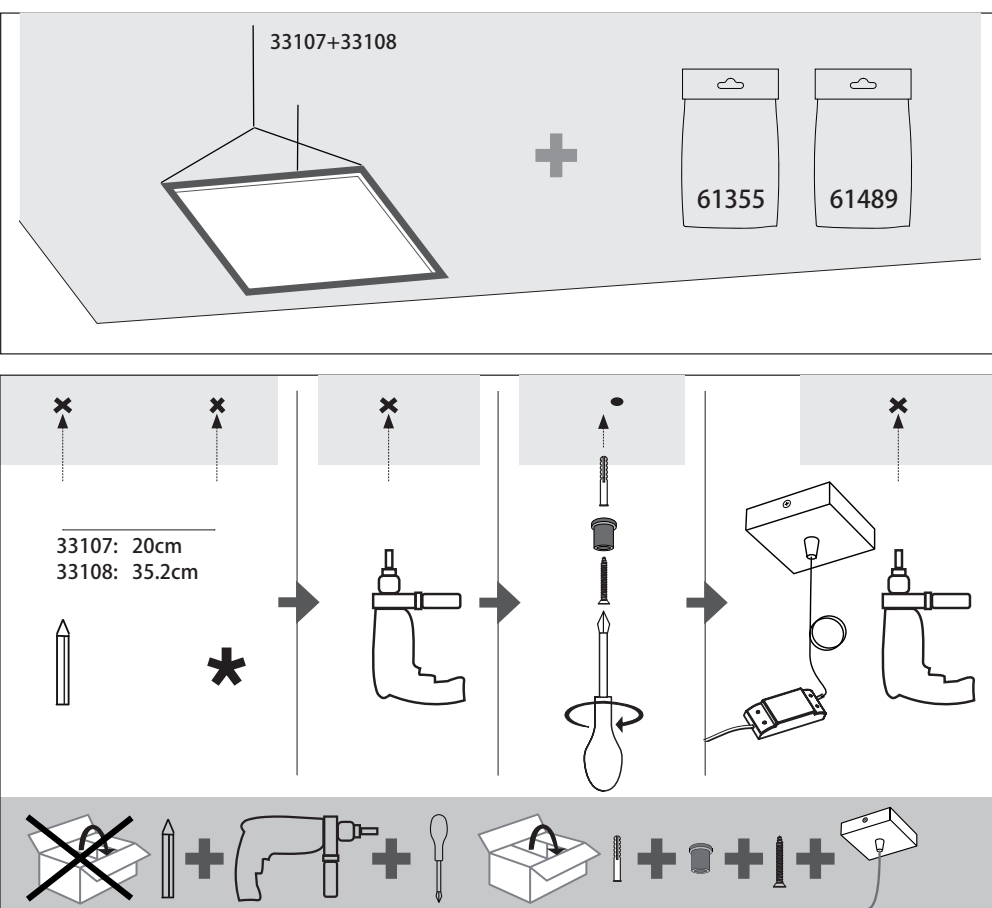 


F

OFF ON	OFF ON
W	9 Single colors
10% 25% 50% 100%	* [brightness icon]
D1 D2	hold [D1/D2] 3 sec → memorize settings → press [D1/D2] → set memorize settings
Flash Smooth	Changing function





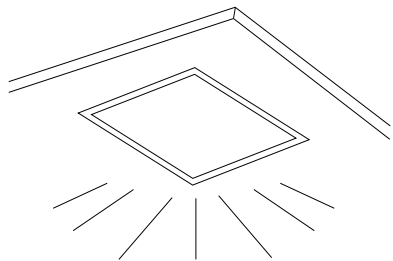 
 


Pairing

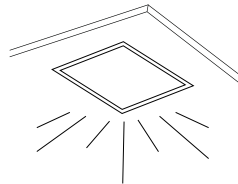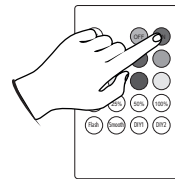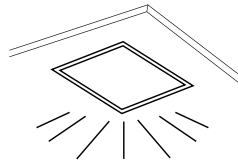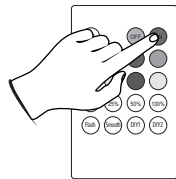     

< 5 sec. 3x ON

      Unpairing

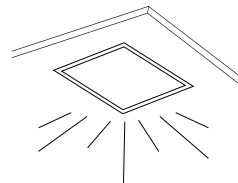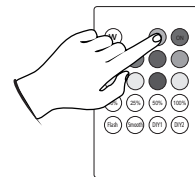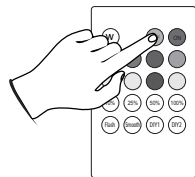

< 5 sec. 3x OFF